

FIG. 1

RC1 : RADIO COMMUNICATION SYSTEM

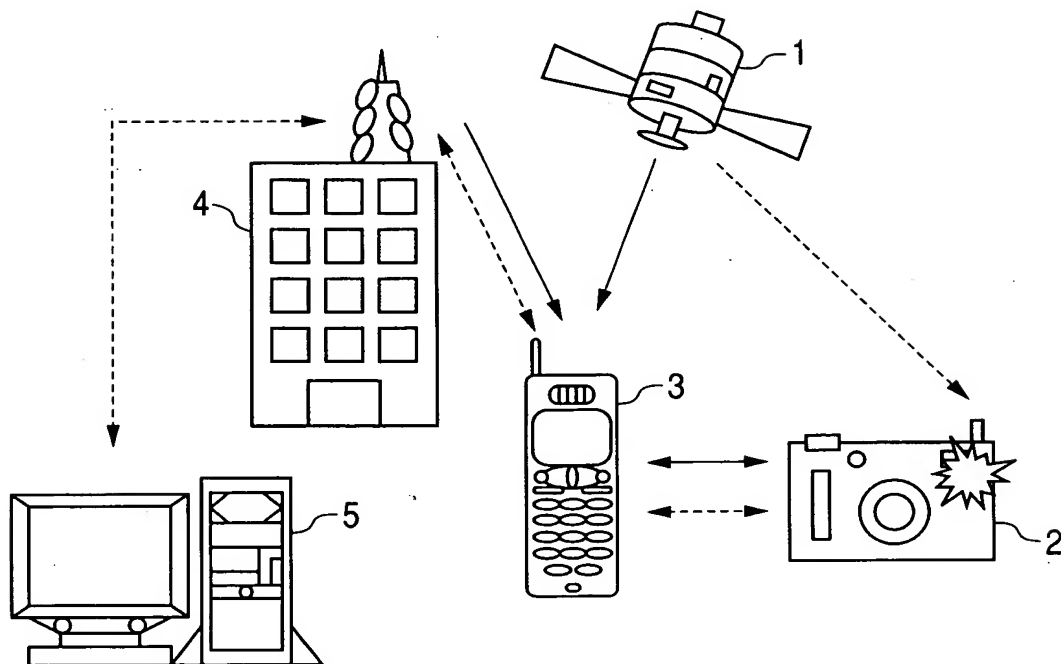


FIG. 2

3: MOBILE TERMINAL

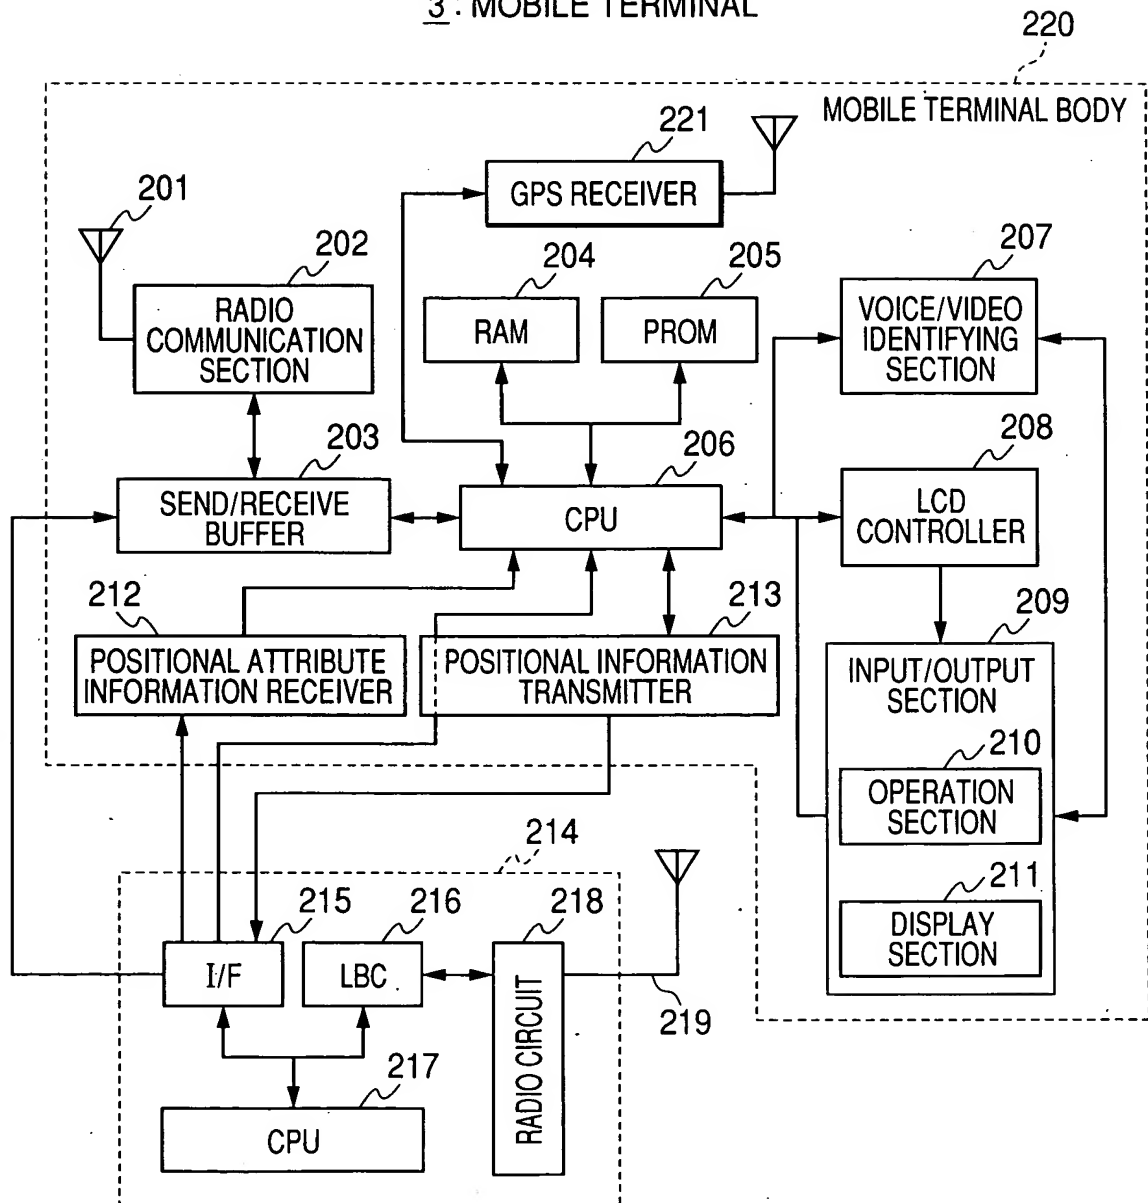
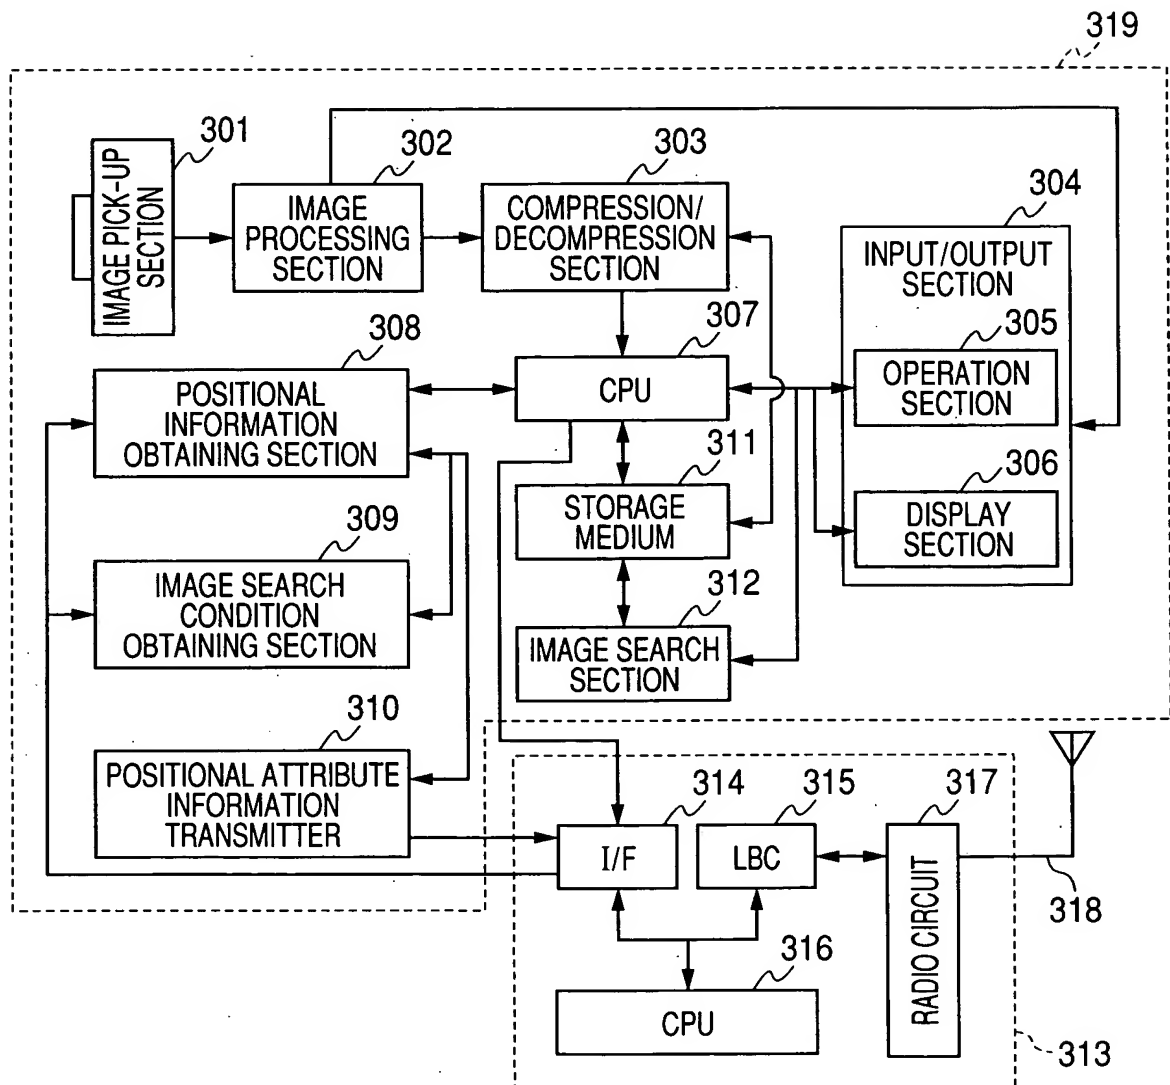


FIG. 3

2: IMAGE PICK-UP APPARATUS



4/9

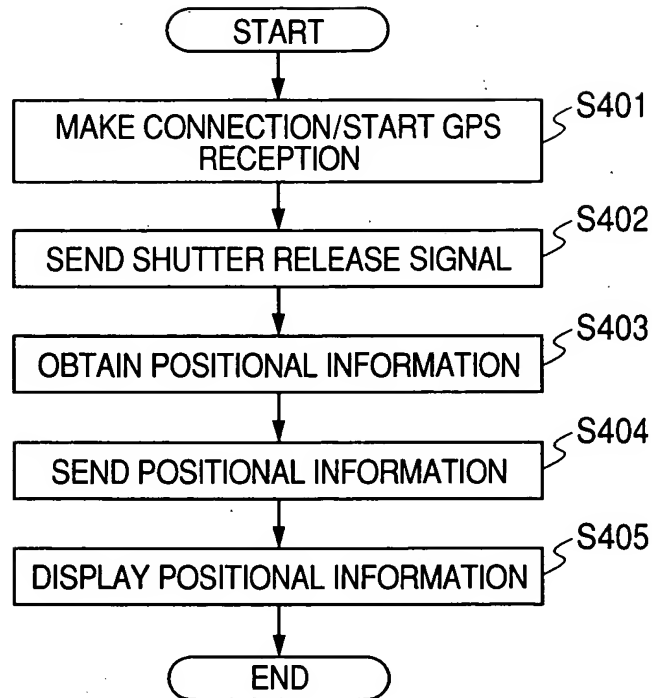
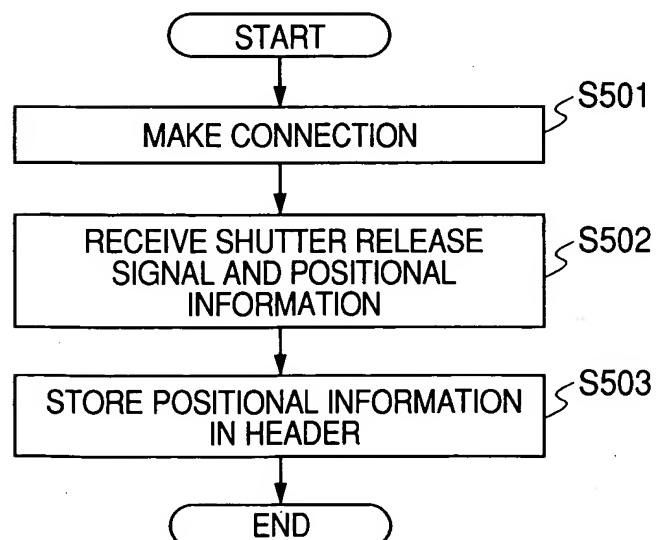
FIG. 4**FIG. 5**

FIG. 6

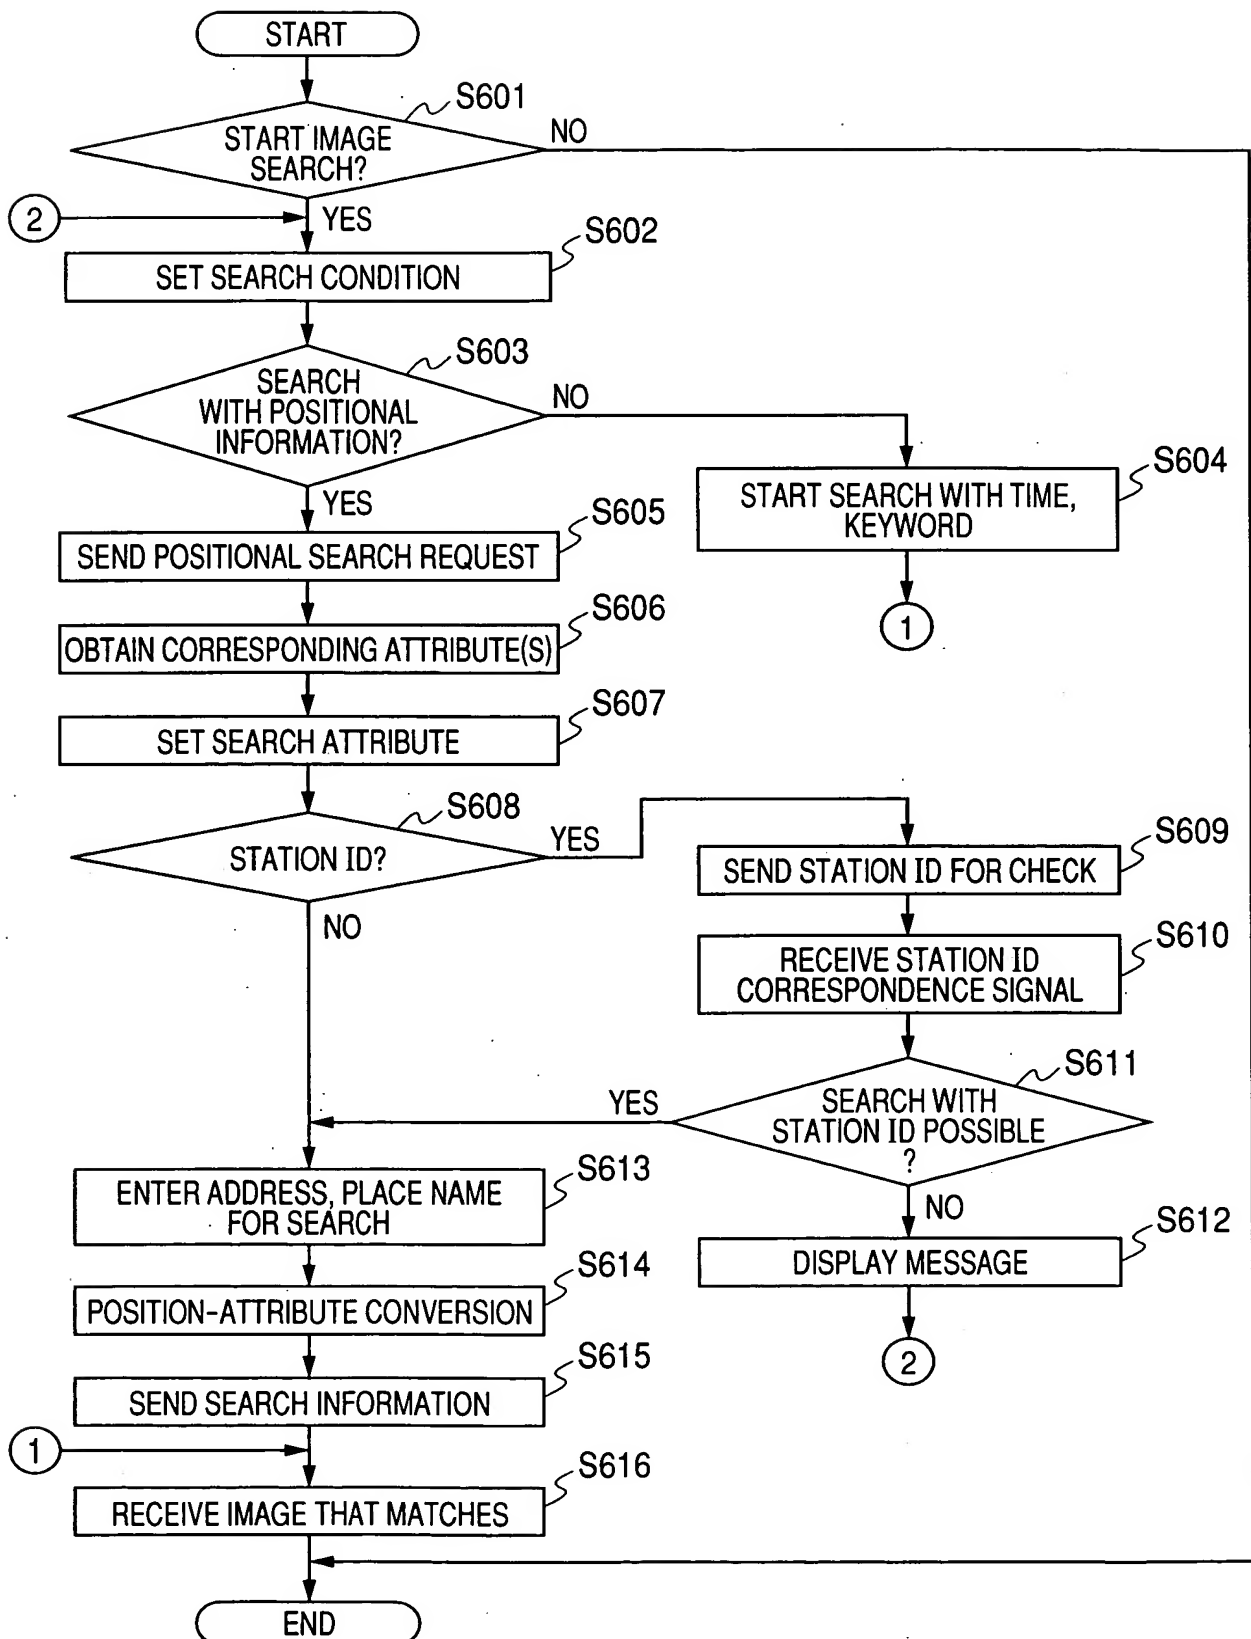


FIG. 7

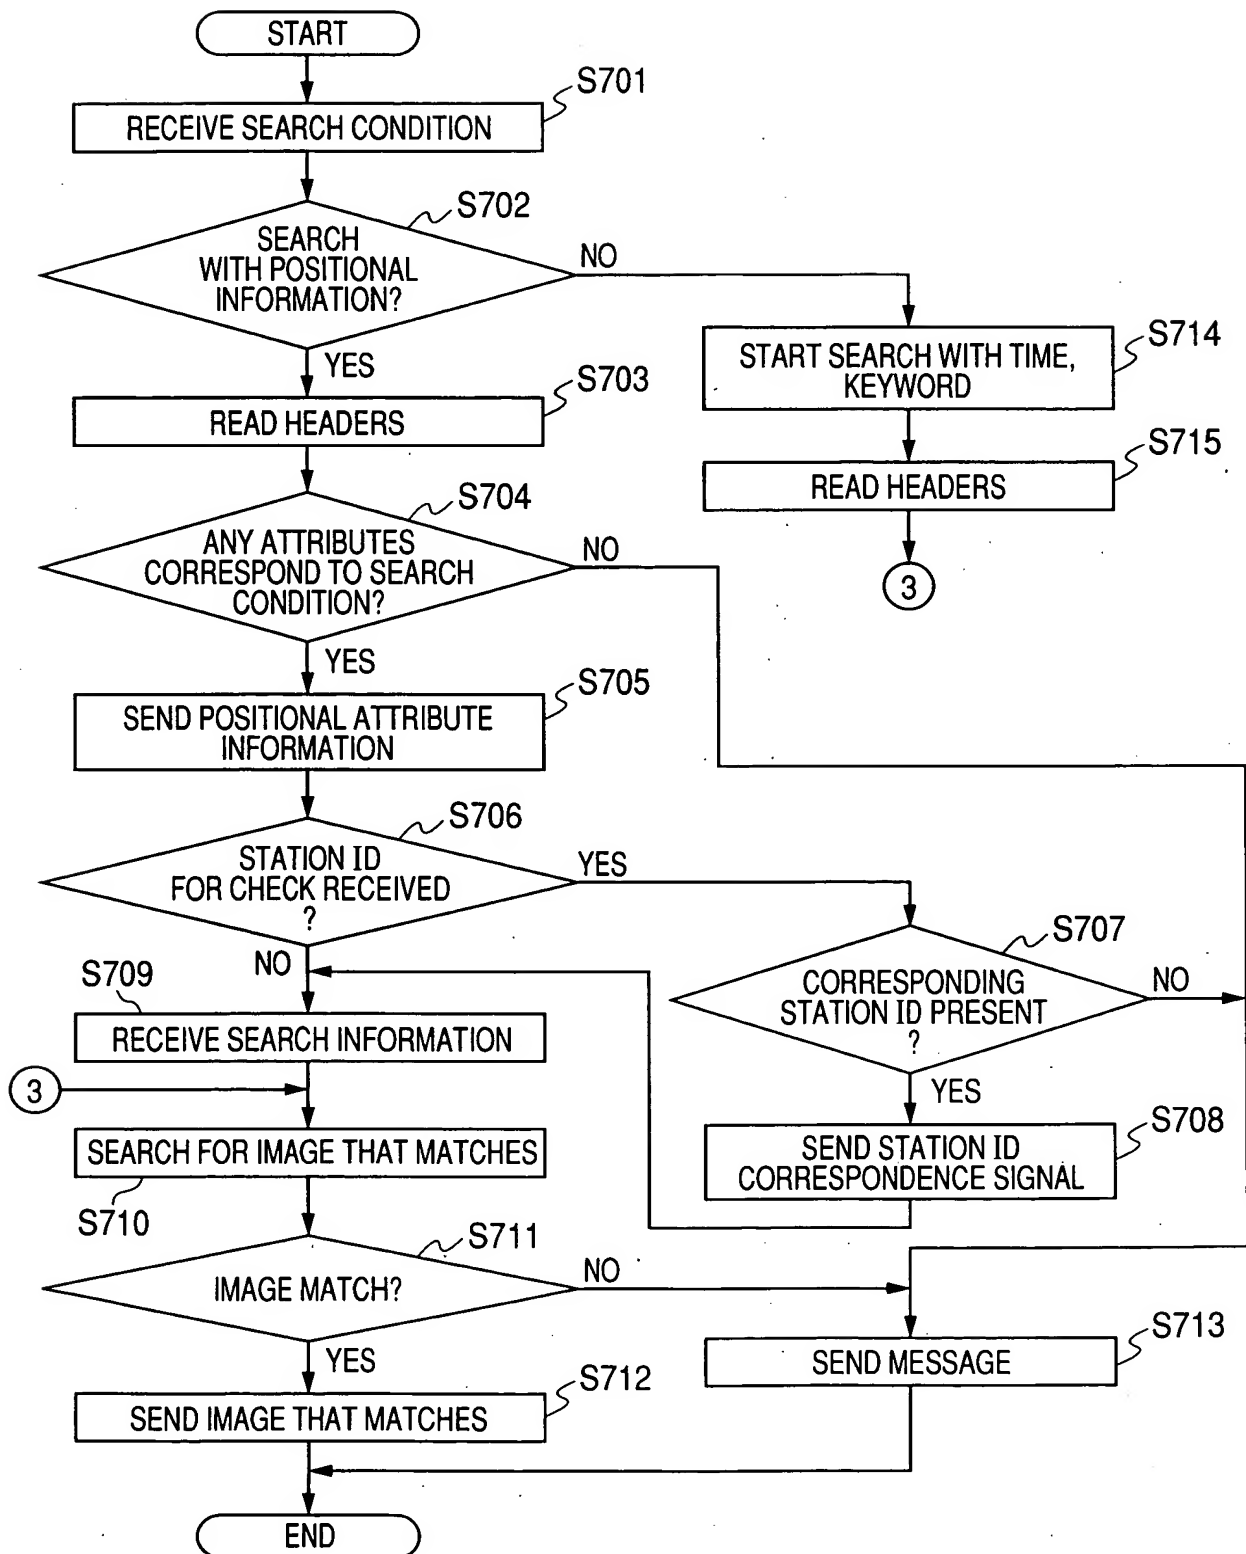


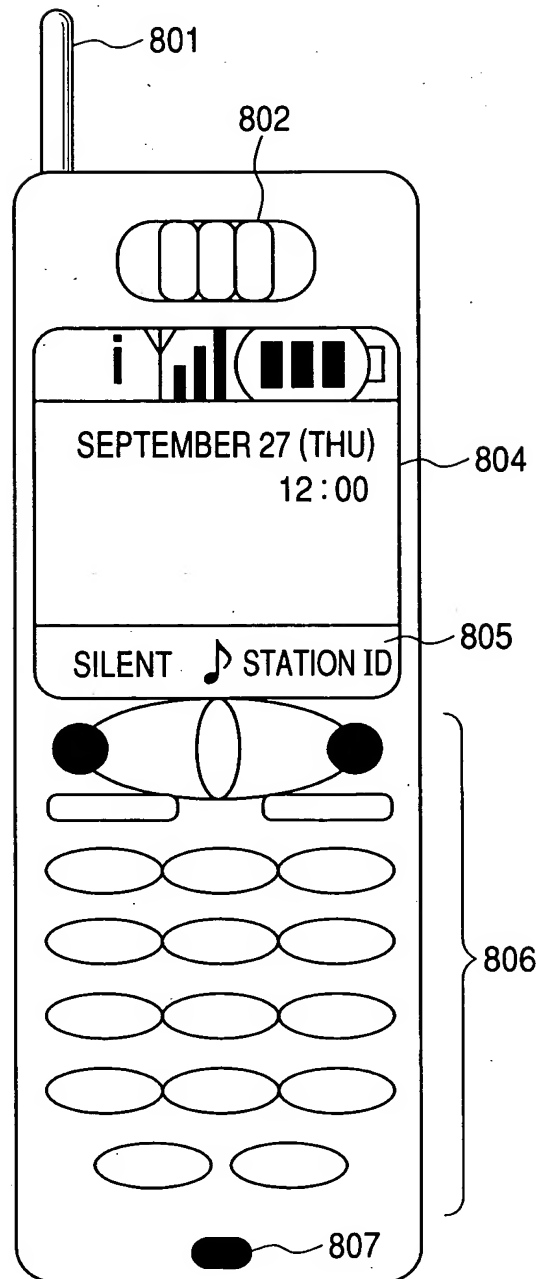
FIG. 83: MOBILE TERMINAL

FIG. 9

FIG. 9 is a screenshot of a mobile device screen showing the "SEARCH CONDITION SETTING" menu. At the top, there is a status bar with an information icon 'i', a signal strength indicator, a battery level indicator, and a speaker icon. The menu title "SEARCH CONDITION SETTING" is at the top of the main area. Below it are three radio button options: "TIME" (unselected), "POSITIONAL INFORMATION" (selected with a black dot), and "KEYWORD" (unselected). At the bottom of the menu are two oval buttons labeled "BACK" and "SET". A footer bar at the very bottom displays the word "SILENT" followed by a musical note icon.

FIG. 10

FIG. 10 is a screenshot of a mobile device screen showing the "SEARCH ATTRIBUTE SETTING" menu. The status bar at the top is identical to FIG. 9. The menu title "SEARCH ATTRIBUTE SETTING" is at the top of the main area. Below it are three radio button options: "GPS" (unselected), "STATION ID" (selected with a black dot), and "CHARACTER" (unselected). At the bottom of the menu are two oval buttons labeled "BACK" and "SET". A footer bar at the very bottom displays the word "SILENT" followed by a musical note icon.

FIG. 11

FIG. 11 is a screenshot of a mobile device screen showing the "MODE CHANGE" menu. The status bar at the top is identical to FIG. 9. The menu title "MODE CHANGE" is at the top of the main area. Below it are three radio button options: "LOCK MODE" (unselected), "AUTOMATIC MODE" (unselected), and "NORMAL MODE" (selected with a black dot). At the bottom of the menu are two oval buttons labeled "BACK" and "SET". A footer bar at the very bottom displays the word "SILENT" followed by a musical note icon.

FIG. 12

FIG. 12 is a screenshot of a mobile device screen showing the "SEARCH CONDITION SETTING" menu. The status bar at the top is identical to FIG. 9. The menu title "SEARCH CONDITION SETTING" is at the top of the main area. Below it are four radio button options: "TIME" (unselected), "GPS" (selected with a black dot), "STATION ID" (unselected), and "KEYWORD" (unselected). At the bottom of the menu are two oval buttons labeled "BACK" and "SET". A footer bar at the very bottom displays the word "SILENT" followed by a musical note icon.

FIG. 133: MOBILE TERMINAL